



COOKER HOOD FCA 550

INSTRUCTION BOOKLET



Contents

- 1 -GENERAL INFORMATION 4
- 2 -SAFETY WARNINGS 4
- 3 - INSTALLATION 4
 - 3.1 - Installation of the fitted group 5
 - 3.2 - Ducting or recirculation fitting 6
 - 3.3 - Electrical connection and working test 6
- 1 -SAFETY WARNINGS 7
- 2 -USE 7
- 3 - MAINTENANCE 7
 - 3.1 - Synthetic filters 8
 - 3.2 - Charcoal filters 8
 - 3.3 - Lighting 8
 - 3.4 - Cleaning 9

1 - GENERAL INFORMATION

This canopy hood is designed to be fitted into cabinets or chimney cooker hoods, placed above a hotplate. It can be used either in the extraction mode (ducted to the outside) or in the recirculation mode (internal recycling). **Before starting the installation, consideration should be given to the difficulties to be found during installation. The installation work must be undertaken by a qualified and competent person in conformity to the rules concerning the evacuation of contaminated air. The manufacturer disclaims all liability for any damage or injury caused as a result of not following the instructions for installation contained in the following text.**

2 - SAFETY WARNINGS

- 2.1 - When used in the extraction mode, the cooker hood ducting must not be connected to a flue which is used for exhausting fumes from appliances supplied with energy other than electric, such as a central heating flue or water heating flue.
- 2.2 - Before connecting to the mains supply ensure that the mains voltage corresponds with the voltage on the rating plate inside the hood.
- 2.3 - Connect the cooker hood to the mains via a bipolar switch which has 3mm clearance between the contacts.
- 2.4 - The device does not require earthing, as it is double-insulated.
- 2.5 - When installed, the hood must be positioned at least 65 cm above the hotplate.
- 2.6 - Never do flambé cooking under this cooker hood.
- 2.7 - Never leave frying pans unattended during use as overheated fat and oil may catch fire.
- 2.8 - Before carrying out any kind of maintenance or cleaning, disconnect the hood from the mains supply.
- 2.9 - If the room where the cooker hood is to be used contains a fuel burning appliance such as a central heating boiler then this must be of the room sealed or balanced flue type. If other types of flue or appliance are fitted, ensure that there is an adequate supply of air into the room. When the cooker hood is used in conjunction with appliances supplied with energy other than electric, the negative pressure in the room must not exceed 0,04 mbar to prevent fumes being drawn back into the room by the cooker hood.

 
3 - INSTALLATION

The following scheme has to be observed:

- 3.1 - Installation of the built-in group
- 3.2 - Set the hood for recirculation or evacuation
- 3.3 - Connect the hood to the mains supply and ensure that it works properly

3.1 - Installation of the fitted group

- 1 - Make a rectangular opening in the base of the overhead cupboard or hood, leaving a minimum of **13 mm** from the outer edges according to the dimensions indicated in the table.

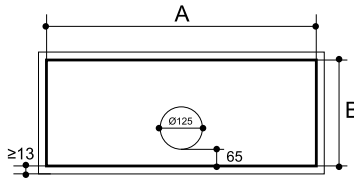

Cooker Hood Dimensions	Side A	Side B
520 mm	497 mm	259 mm
700 mm	677 mm	259 mm

 
 
 
 
- 2 - Drill a hole into the upper side of the cabinet in accordance with the dimensions of the duct used for both the evacuation and recirculation mode.

- 3 - Dismantle the ducting support (version with grill or version with filters), pulling the two pommels **A** (fig. 1) simultaneously:

- a) Fixing frame with screws:
Fix the fitted group to the hood or cupboard, using the self-threading screws (**No. 10**) provided with the accessories (fig. 2).

- b) Rapid fixing with side supports:

The device **B** is set up to deal with a panel thickness of from **15 mm** to **30 mm**. Insert the group into the opening until the two devices **B** connect. Lock the adjustment screw **C** until the fitted group adheres tightly to the surface (fig. 2).

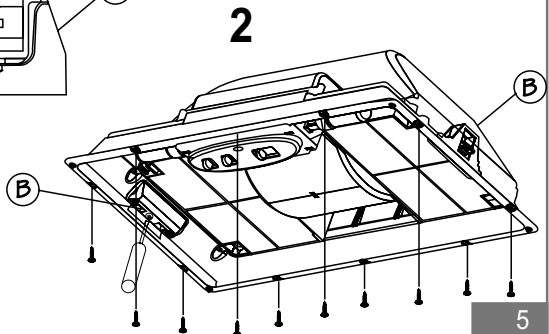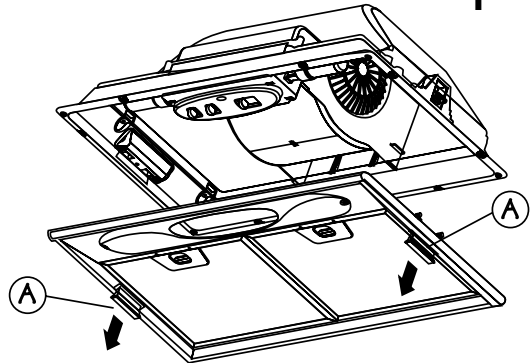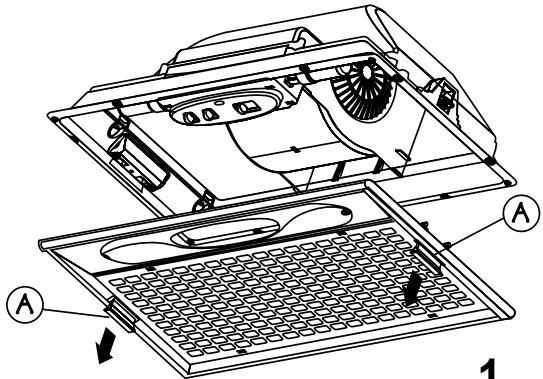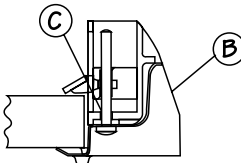

- 4 - Close the ducting support by pushing and connecting the two pommels **A** (**fig. 3**).

3.2 - Ducting or recirculation fitting

- 1 - Ducting fitting:

 
 
a) The hood can be ducted to the outside using either a rigid or a flexible \varnothing 100 or 120 mm duct to be fixed with suitable clamps, not provided (**fig. 4**).

b) If the hood is provided with the charcoal filters fitted, the filters should be removed (see par.3.2 part 2).

- 2 - Recirculation fitting:


a) When used in the recirculation mode, the charcoal filters must be fitted into the cooker hood (see par. 3.2 part 2).

b) The air is recirculated into the kitchen through the opening located on the upper side of the cabinet or of the hood (**fig. 4**).

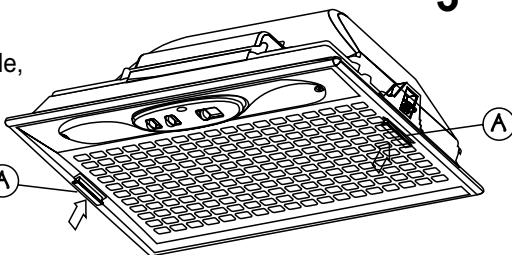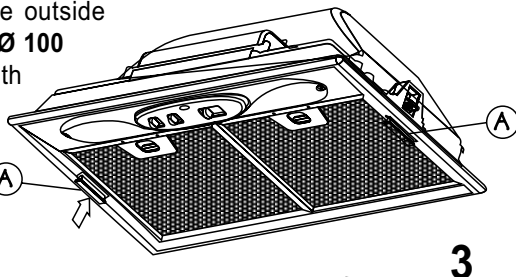

3.3 - Electrical connection and working test

 - 1 - The safety measures 2.2, 2.3 and 2.4 of paragraph 2 are to be strictly observed.
- 2 - Once the electrical connection has been completed, check that the worktop illumination, motor and speeds work properly.

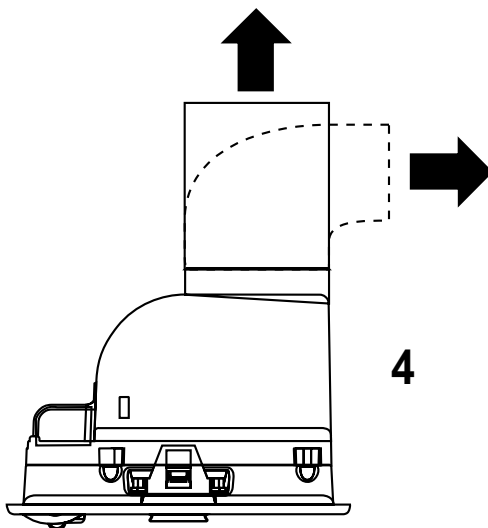

1 - SAFETY WARNINGS

It is most important that all the warnings shown in paragraph 2 of the Installation Instructions are strictly observed. Moreover, special attention must be paid to the following warnings during the use and maintenance of the cooker hood:

- 1.1 - The grease filters and the charcoal filters should be cleaned or replaced as recommended by the manufacturer or more frequently if the hood is used consistently (more than 4 hours per day).
- 1.2 - When using a gas hob in connection with the cooker hood never leave the burners of the hob uncovered while the hood is in use or when the pans have been removed. Switch off the gas before removing the pan or for just short periods and never leave the hob unattended.
- 1.3 - Always ensure that the appliance is kept at the correct intensity to prevent the flame from licking round from the bottom of the pan; this will save energy and will avoid a dangerous concentration of heat.
- 1.4 - Always ensure that the appliance is used in accordance with the manufacturer's instructions for the removal of contaminated odours during cooking.

2 - USE

Control panel

 
The cooker hood can be operated as follows:
LIGHT SWITCH L = controls the worktop illumination;

MOTOR SWITCH V = controls the power to the motor and the fan speed:

Position 1 = low speed, should be selected when simmering or using only one pan: the noise level is kept to the minimum.

Position 2 = medium speed, should be selected for normal cooking. This speed offers the best ratio between air capacity and noise level.

Position 3 = top speed, should be selected when frying or cooking food with strong odours, even for a long period.

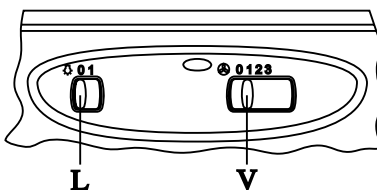


5

3 - MAINTENANCE

Regular maintenance and cleaning will ensure good performance and reliability, while extending the working life of the hood. Special attentions should be paid to the grease filters and to the charcoal filters when the hood is used in the recirculation mode.


3.1 - Synthetic filters

 - 1 - This filter cannot be washed and should be replaced every two months. If the filter is provided with a saturation indicator, replace when the violet color of the dots which are visible from the outside is spread over the whole surface of the filter.
- 2 - Replacement:
 - a) Remove the ducting grill, referring to paragraph 3.1.3. on installation.
 - b) After having taken off the ducting grill, remove the filter stops (1). Replace the grease filter (2) (fig. 6).
 - c) Close the ducting grill up again.

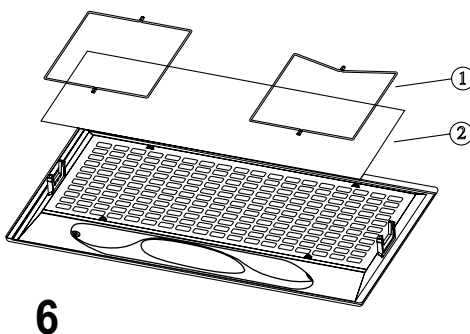


3.2 - Charcoal filters

 - 1 - Functioning
In the recycling mode the charcoal filters absorb smell and odours. The charcoal filter cannot be washed or regenerated and should be replaced every **2 months** or more frequently if the hood is used consistently.
- 2 - Replacement:
 - a) Remove the ducting grill, referring to paragraph 3.1.3. on installation.
 - b) Replace the active charcoal filter (fig. 7).

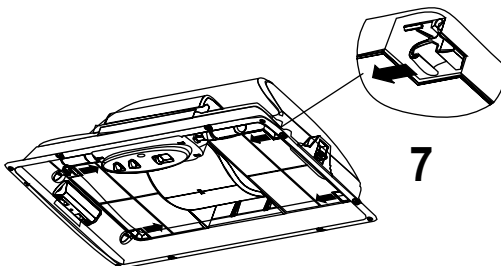

3.3 - Lighting

 - 1 - This is provided by two 40 W lamps. If the lamps do not work, open the suction grille and check that they are properly fitted. If the lamps have burned out they must be replaced using others of equivalent voltage and power.
- 2 - Replacement:
 - a) 40 W lamp (fig.8), unscrew the burned out lamp and fit the new one.
- 3 - Replace the suction grille.

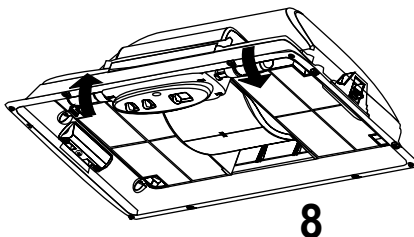

3.4 - *Cleaning*

When cleaning the hood:

- Never use a wet cloth or sponge, or running water.
- Never use thinners or products containing alcohol, as they might damage the paintwork.
- Never use abrasive cleaning materials, in particular when cleaning stainless steel surfaces.

It is recommended to use a damp cloth and mild liquid household cleaner.

SERVICE AND SPARE PARTS



In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning:-

08705 929929

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working."

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code
2. Your telephone number
3. Clear and concise details of the fault
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

CUSTOMER CARE DEPARTMENT

For general enquiries concerning your appliance, please contact our Customer Care Department by letter or telephone at the address below:

Customer Care Department
EHP
55-77 High Street
Slough
Berkshire
SL1 1DZ
08705 950950 (*)

* calls to this number may be recorded for training purposes.

GUARANTEE CONDITIONS

Standard guarantee conditions

We, EHP, undertake that if within 12 months of the date of purchase this Firenzi appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same **FREE OF CHARGE** for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Service Force Centre.
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Home visits are made between **8.30am** and **5.30pm** Monday to Friday. Visits may be available outside these hours in which case a **premium** will be charged.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking in account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliance.

France	Senlis	+33 (0) 344 62 20 13
Germany	Nuremberg	+49 (0) 800 234 7378
Italy	Pordenone	+39 (0) 800 11 7511
Sweden	Stockholm	+46 (0) 20 78 77 50
UK	Slough	+44 (0) 1753 219898



This appliance conforms to European Low Voltage Directive 73/23/CEE governing electrical safety, European Directive 89/336/CEE on Electromagnetic Compatibility and Directive 93/68/CEE regarding CE Marking.